


CLUTCH 

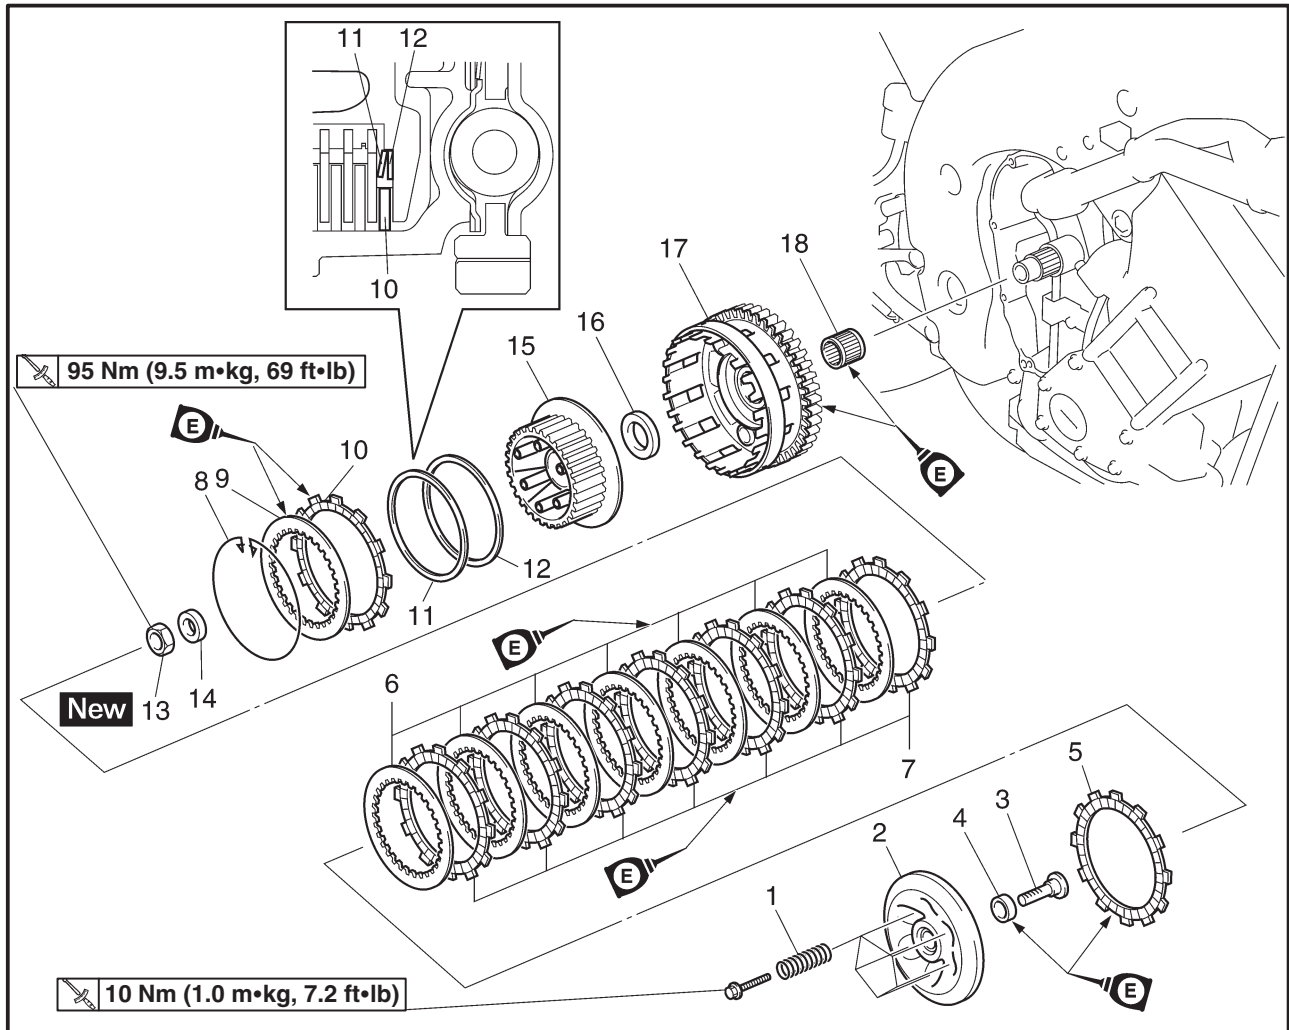

Order	Job/Part	Q'ty	Remarks
	<b>Removing the clutch</b>		Remove the parts in the order listed.
1	Compression spring	6	
2	Pressure plate	1	
3	Pull rod	1	
4	Bearing	1	
5	Friction plate 1	1	
6	Clutch plate 1	7	
7	Friction plate 2	7	
8	Wire clip	1	
9	Clutch plate 2	1	
10	Friction plate 3	1	
11	Clutch damper spring	1	
12	Clutch damper spring seat	1	